

Using Highway Assist in Lucid Air

 
Highway Assist is Lucid's latest DreamDrive feature that will elevate your driving experience and help with highway driving on supported roads. It helps you steer by actively centering your vehicle in the driving lane, and adjusts your speed to help you maintain a safe following distance from vehicles in front of you.

Highway Assist is a **hands-on** system, meaning you must be ready to take control at all times. Do not rely solely on DreamDrive features to keep you, your passengers, or other road users safe. Drivers are responsible for remaining alert and driving safely and responsibly at all times.

Setting Up Highway Assist

You must calibrate your vehicle's camera and sensors before being able to use Highway Assist. To do this:

- 01:** Start driving on a straight highway, without steep inclines or sharp curves, during off-peak traffic hours.
- 02:** Activate Adaptive Cruise Control. Then drive normally.
- 03:** Depending on road and traffic conditions, your sensors should take 30–45 minutes to calibrate. Calibration time is **not** cumulative. You may need to drive for up to 45 minutes without turning off your vehicle to calibrate your sensors.
- 04:** A steering wheel icon will appear on the Glass Cockpit when Highway Assist becomes available.

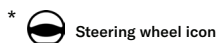


Using Highway Assist

Once your sensors are calibrated, DreamDrive will default to Highway Assist. To activate and use Highway Assist:

- 01:** While driving on a supported highway, press the DreamDrive button.



- 02:** If Highway Assist is available, a steering wheel icon will appear on the Glass Cockpit.

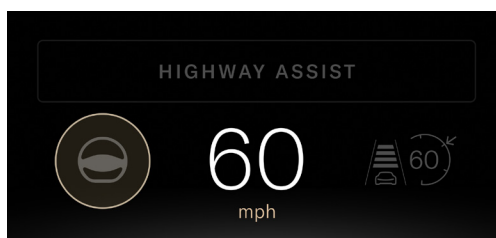

03: To activate Highway Assist, press the Set button. You will hear a chime, and the steering wheel icon and the words Highway Assist on the Glass Cockpit will turn gold.



04: Adjust your following distance to your preferred setting by pressing the Gap Setting button.



05: Cancel Highway Assist by pressing the Cancel button or the brake pedal. To turn DreamDrive off entirely, press the DreamDrive button.



Highway Assist Tips

01: Change lanes as you normally would. While changing lanes, the lane centering feature will momentarily deactivate.

02: You can easily switch between Highway Assist and Adaptive Cruise Control by pressing and holding the DreamDrive button.

03: Highway Assist is only available when the steering wheel icon appears. When Highway Assist is unavailable, your vehicle will remain in Adaptive Cruise Control.

04: You will be notified that Highway Assist is unavailable if your vehicle's sensors are blocked by dirt or glare, if you have limited or no network connectivity for accessing map data, or if you're driving on an unsupported highway.

05: Highway Assist is a hands-on system. If you aren't touching the wheel, or if the driver camera detects that you're distracted, the system will alert you to keep your hands on the wheel.

06: Assisted steering may be limited on highways with tight curves. When this happens, the system will alert you to steer manually until assisted steering reactivates.